


#47705

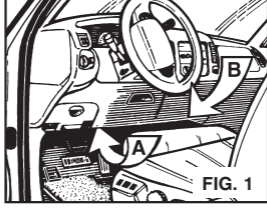

1. Locate brake control connector (Fig. 2 / C) under dash (Fig. 1 / A or B).
(B = 1994-96 F-series;
A = All others)
2. Plug the connector into the vehicle connector (Fig. 2 / B).
3. Attach / splice wires to a brake control using the wiring code provided.

WIRE CODE

White wire.....Ground


Blue wire.....Electric brake

Black wire.....Battery

Red wire.....Stop lamp

switch

NOTE: Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

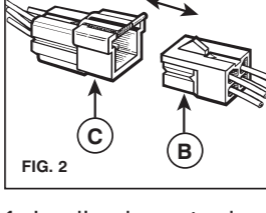

1. Localice el conector de control (Fig. 2 / C) de frenos bajo el tablero (Fig. 1 / A or B).
(B = 1994-96 F-series;
A = Otra modales)
2. Enchufe el conector dentro del conector del vehículo (Fig. 2 / B).
3. Sujete / empalme cables al control de frenos usando el código de cableado proporcionado.

CÓDIGO de CABLEADO

Cable blanco .. Tierra

Cable azul Freno

eléctrico

Cable negro ... Batería

Cable rojo..... De luces de

pare

NOTA: Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes.

Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.