


#48295

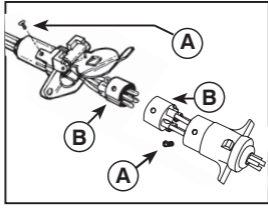

1. Loosen the set screw (A) on the vehicle end socket and remove the socket from housing. Route wiring through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway with housing key and insert socket into housing. Tighten set screw.
2. Loosen set screw (B) on the trailer end plug and remove housing. Repeat procedures in Step 1. Leave 18" of slack between tow vehicle and trailer to allow trailer to turn. Cut off excess wires.
3. Plug trailer in to vehicle and test all functions.

LOCATE WIRES BY

FUNCTION ONLY

White WireGround

Yellow WireLeft turn

Green WireRight turn

Brown WireTaillight

-
1. Afloje el tornillo (A) en el vehículo enchufe y retire el enchufe de la caja. Deslice los cables a través de la caja. Pele 6 mm de los extremos de los cables y asegúrelos a las terminales. Alinee el enchufe con la llave de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.
 2. Afloje el tornillo (B) del enchufe del extremo del remolque y retire la caja. Repita el paso 1. Deje 45 cm de cableado suelto entre el vehículo de remolque y el remolque para que el remolque pueda virar. Corte el exceso de cables.
 3. Enchufe el remolque al vehículo y pruebe todas las funciones.

LOCALICE LOS CABLES

POR FUNCIÓN SOLAMENTE

Cable blancoTierra

Cable
amarillo.....Direccional
izquierda

Cable verdeDireccional
derecha

Cable caféLuces
traseras