
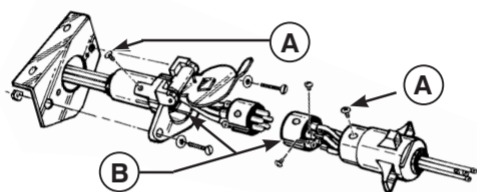


WIRE IDENTIFICATION

GREEN	RIGHT TURN
YELLOW	LEFT TURN
BROWN	TAIL / PARK
WHITE	ATTACH TO GROUND
BLUE/RED.....	ATTACH TO BACKUP

IDENTIFICACIÓN DE LOS CABLES

VERDE	DIRECCIONAL DERECHA
AMARILLO.....	DIRECCIONAL IZQUIERDA
CAFÉ	TRASERA / ESTACIONAMIENTO
BLANCO	CONEXIÓN A TIERRA
AZUL/ROJO.....	CONECTE A LA REVERSA

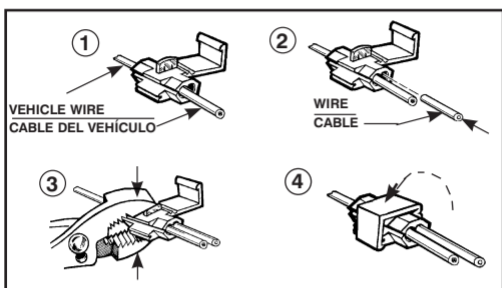

1. Install mounting bracket with screws provided.
2. Loosen the set screw (A) on the vehicle end socket and remove the socket from housing. Route wiring provided through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway (B) with housing key and insert socket into housing. Tighten set screw.
3. Strip the wire ends 1/4" and, using the splice connectors, attach them to the corresponding function wires.
4. Mount the completed socket assembly to the bracket.
5. Loosen set screw on the trailer end plug and remove housing. Repeat procedures in Step 2 and Step 3. Leave 18" of slack between tow vehicle and trailer to allow trailer to turn. Cut off excess wires.
6. Plug trailer into vehicle and test all functions.

NOTE: Locate wires and pin location by function only. Color coding is not standard among all manufacturers.

1. Instale el soporte de montaje con los tornillos que se incluyen.
2. Afloje el tornillo (A) en el vehículo y retire el enchufe de la caja. Deslice los cables a través de la caja. Pele 6 mm de los extremos de los cables y asegúrelos a las terminales. Alinee el enchufe con la llave (B) de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.
3. Pele 6 mm de los extremos de los cables y usando los conectores de empalme conéctelos con los cables de la función correspondientes.
4. Monte el ensamblaje de enchufe hembra completo al soporte.
5. Afloje el tornillo del enchufe del extremo del remolque y retire la caja. Repita el paso 2 y 3. Deje 45 cm de cableado suelto entre el vehículo de remolque y el remolque para que el remolque pueda virar. Corte el exceso de cables.
6. Enchufe el remolque al vehículo y pruebe todas las funciones.

NOTA: Localice los cables y la localización de los pasadores por función solamente. Los códigos de color no son la norma entre todos los fabricantes.